



MA1 WIRELESS ANDROID AUTO CAR ADAPTER

In-Car Connectivity in a Cinch



androidauto



MA1 SETUP

Step 1: Check System Requirements



Smartphone running Android 11 or higher



Active phone data plan with 5 GHz Wi-Fi



Cars with Android Auto™ installed in dashboard






MA1 SETUP

Step 2: Turn on Wireless Android Auto™

Grant permission to turn on Bluetooth and access notifications

Head to the Google Play store to check and install the latest Android Auto app

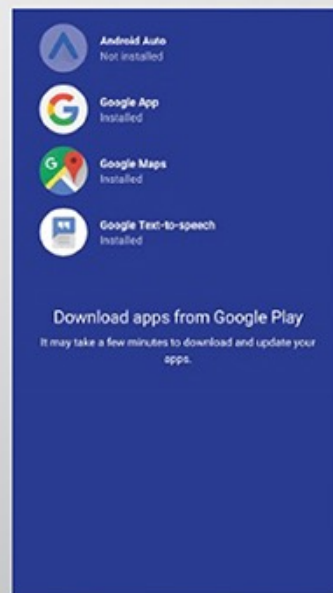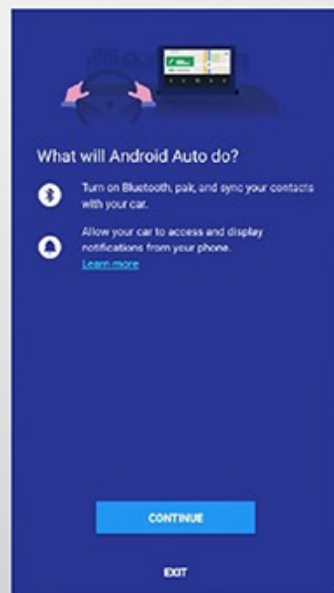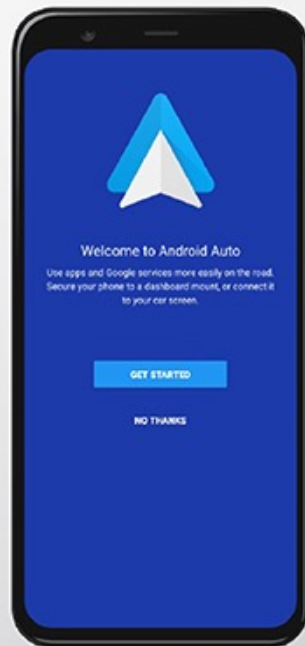



MA1 SETUP

Step 3: Plug in MA1

Locate USB port under dashboard or in center console.





MA1 SETUP

Step 4: Pair with Bluetooth

Light flashes blue for first-time pairing.

Depending on your mobile device, you may need to disconnect from Wi-Fi or turn off mobile hotspot before pairing.





MA1 SETUP

Step 5: When finished pairing, attach gel pad to MA1 and center console

Light turns green when paired successfully.
Optional gel pad attaches to center console for stability.

